

CONTROLLER



TT-MTC2-4-6 : PRESET 2 HR, 4 HR OR 6 HR TIMER & THERMOSTAT

FEATURES

This Timer is an **electronic** timing device, with preset temperature control, which allows a load to be switched over a preset period; either 2, 4 or 6 hours.

METHOD OF OPERATION

To set 2 hour/4 hour/6 hour mode

- Press the On/Off button once and the **2 hour** LED light will come on.
- Press the On/Off button again and the **4 hour** LED light will come on.
- Press the On/Off button again and the **6 hour** LED light will come on.
- Press the On/Off button again and the unit will turn off.

NB: The Power LED will be lit up when the heating is on and the MAN function is not operational

Temperature Control Settings

Comfort: 18°C – 26°C

Backup: 5°C – 15°C

The above temperature parameters will be set by your Installer.



INSTALLATION INSTRUCTIONS

Before wiring, ensure that:

- All electrical connections are performed by a registered electrician only, as required by law.
- The supply is disconnected at the distribution board.
- All connections are secure and tested prior to activation.
- You have studied and fully understood the connection diagram.
- VR1 sets the comfort temperature. Use a screw driver to adjust the temperature between 18°C and 26°C.
- VR2 sets the backup temperature. Use a screw driver to set the temperature between 5°C and 15°C.

WIRING NOTE



- Phase (red)
- Element (brown)
- Neutral (black)

SPECIFICATIONS

Electrical Rating: 230-240V, ac50Hz

Load: 15A resistive

Warranty: One (1) year

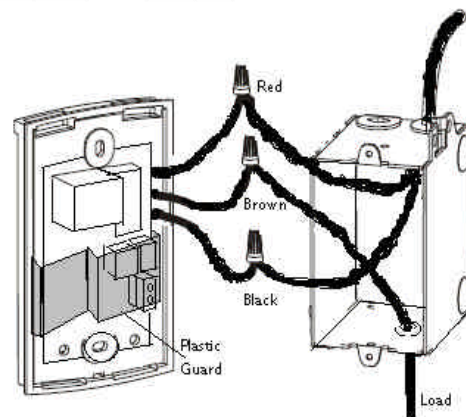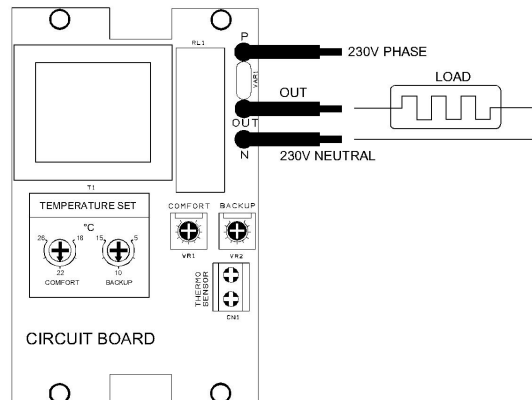

ONE (1) YEAR WARRANTY

This product is warranted against defects in material and workmanship under normal conditions of use for a period of one year from the date of purchase. During this period, the manufacturer will repair or replace the product, if it is defective in normal operating conditions in terms of materials or workmanship, with a new product of equivalent quality at the manufacturer's option. The warranty does not cover costs of transportation, removal, installation or damage caused by misuse or accident. In no event will the manufacturer be liable for consequential loss resulting from the installation of the product. Any defective product should be sent with the original invoice to the original supplier

