

TIMERBOX INSTRUCTIONS

HM7B

(Rated at 15 Amps)

INSTALLATION INSTRUCTIONS

Note: Suitable for use with any electric heater up to 3.5 kW
Only suitable for heaters above 3.5 kW if used with a relay.

1. Remove knob screw is located on the side of knob
2. Remove (2) side self tappers holding front cover to inner panel
3. Disconnect wires to pilot light and unit body (if needed).
4. Fit unit to the wall using the (4) mounting points. Ensure unit is level and secure.

Note: For best results mount on a wall approximately halfway between the heater and the furthest wall from the heater.

Do not mount directly above the heater!

5. Connect active from isolated mains power to terminal A1. (cable located closest to the wall – red cable).
6. Connect neutral from isolated mains to terminal N. (cable located closest to front – black cable).
7. Connect active from the heating unit to terminal A2 (the middle terminal – red cable).
8. Reconnect wires that were disconnected during point 3.
9. Ensure all electrical connections are tight
10. Fit front.
11. Attach knob.
12. Ensure unit is in correct working order.

Dimensions: L: 180mm W: 80mm D: 80mm


Cable Entry: Unit has an open back. It is recommended to make it central.

OPERATING INSTRUCTIONS

The HM7/B is fitted with a 3HR timer which can be turned anywhere from 0 to 3 hours. Once the timer has returned to zero the heater will switch off.

The HM7/B is fitted with a thermostat which will cut power to the heating unit (when timer is operating) once the preset temperature is reached (approx. 25 degrees) and will cut back in once the room temperature has dropped.

WIRING DIAGRAM

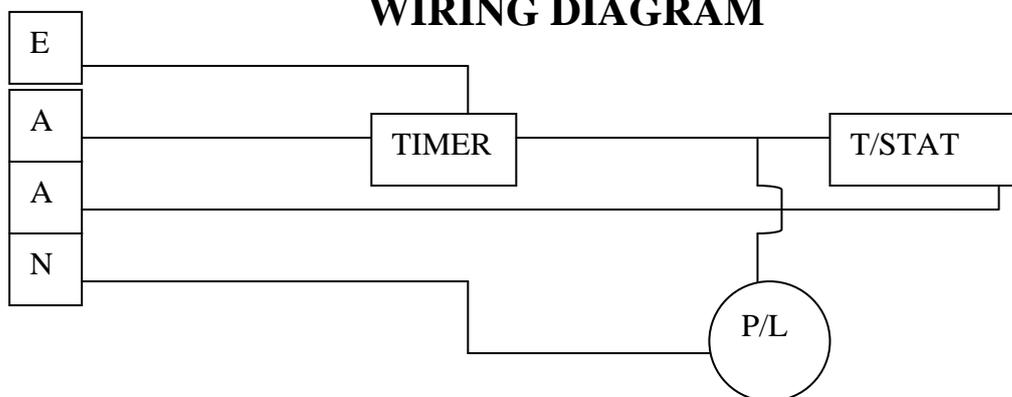

D.R. Distribution Pty.Ltd.

A.B.N.42 055448952 A.C.N.055448952

Phone (02) 9618 3842 Fax (02) 9829 2603

Unit 9 No 3 Lancaster St Ingleburn NSW 2565 P.O.Box 568 Ingleburn NSW 1890

www.drdistribution.com.au